
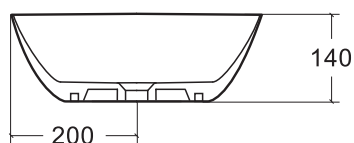
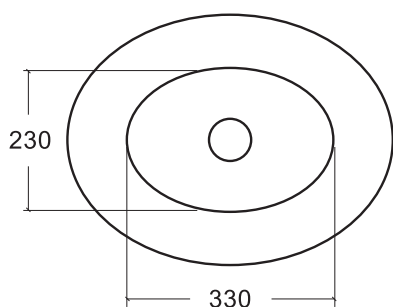


PESINI

Counter Top Ceramic Basin

Specifications & Data

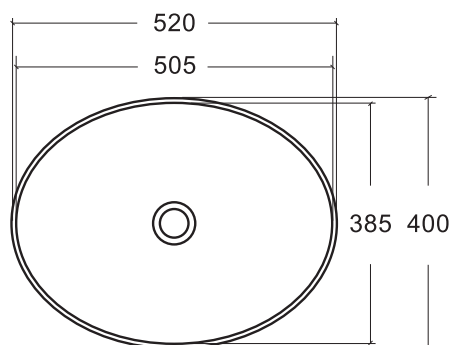

Model: Z5239MB

Above Counter Basin

Size: 520x400x140mm



Tap Hole: N/A

Waste Outlet: 32mm Ceramic Matching Color Pop Up waste with 40mm Adapter

Bowl Capacity: 11 L

Finish Colors: Matte Black/Matte White/Gloss White

Over Flow: N/A

Fixing: Ceramic Pop Up Waste

Dimension: All dimensions are in millimeters and are subject to normal manufacturing variations.



Z5239MW



Z5239GW

INSTALLATION INSTRUCTIONS



Great Services, Great Design, Great Product

Above Counter Basin



Prior to Installation:

- Inspect sink to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Additional floor and wall preparations may be necessary to avoid damage to the product.
- We recommend professional countertop installers. Customer is responsible for damage to countertop and/or sink during installation.
- All dimensions are nominal! Be sure to measure your sink prior to installation.

General Recommendations: Read installation and maintenance instructions thoroughly before installing the sink. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

SUGGESTED TOOLS AND MATERIALS


·Drill ·Acetone · Safety Glasses ·Pencil ·Tape Measure

PARTS LIST

- Sink
- Sink Faucet (not included)
- Sink Drain (not included)


1. Mark Faucet & Drain Location

- Place your sink in desired location on countertop and mark the drain and faucet hole with a pencil.
- Make sure clearance is suitable for backsplash, faucet, and plumbing for the sink.

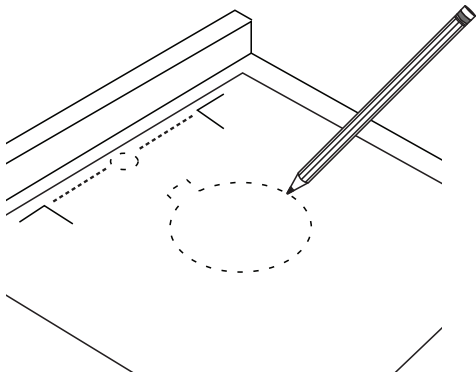


2. Drill Countertop

- Cut the opening for the drain in the countertop.

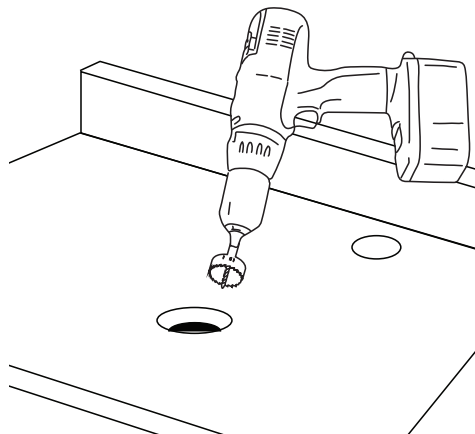

3. Install Faucet

- Install faucet (not included) according to manufacturer's instructions..

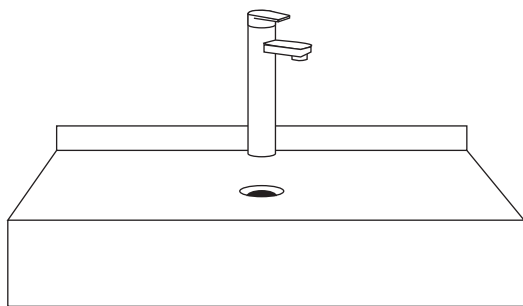

4. Install Sink

- Check alignment of the sink to the opening in the countertop.
- Use a bead of clear silicone (or preferred adhesive) around the underside of the sink.
- Carefully place the sink on the countertop, align, and press firmly.
- Allow sealant to set above 60 minutes.
- Use acetone or denatured alcohol to remove any excess sealant after application.

