


RONDA

Counter Top Ceramic Basin



Specifications & Data

SIDE VIEW

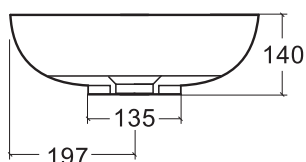


Model: Z4040GW

Above Counter Basin
Size: 395x395x140mm



TOP VIEW

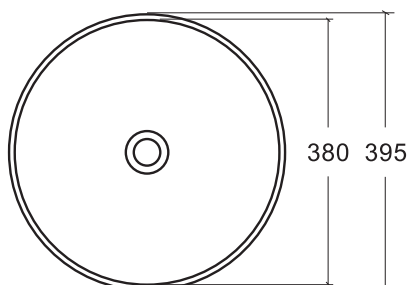

Tap Hole: N/A

Waste Outlet: 32mm Ceramic Matching Color Pop Up waste with 40mm Adapter

Bowl Capacity: 7.5 L

Finish Colors: Matte White/Gloss White

Over Flow: N/A

Fixing: Ceramic Pop Up Waste

Dimension: All dimensions are in millimeters and are subject to normal manufacturing variations.



Z4040MW

INSTALLATION INSTRUCTIONS



Great Services, Great Design, Great Product

Above Counter Basin



Prior to Installation:

- Inspect basin to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Additional floor and wall preparations may be necessary to avoid damage to the product.
- We recommend professional countertop installers. Customer is responsible for damage to countertop and/or basin during installation.
- All dimensions are nominal! Be sure to measure your basin prior to installation.

General Recommendations: Read installation and maintenance instructions thoroughly before installing the basin. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

SUGGESTED TOOLS AND MATERIALS

·Drill

·Acetone


· Safety Glasses

·Pencil

·Tape Measure


1. Mark Faucet & Drain Location

- Place your basin in desired location on countertop and mark the drain and faucet hole with a pencil.
- Make sure clearance is suitable for backsplash, faucet, and plumbing for the basin.

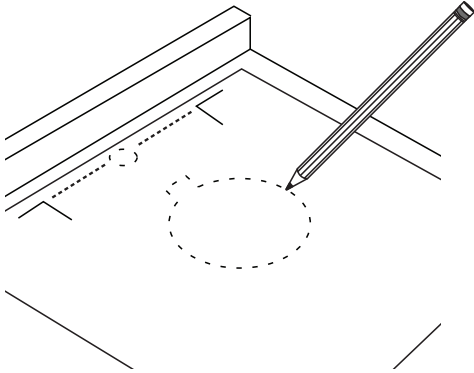


2. Drill Countertop

- Cut the opening for the drain in the countertop.

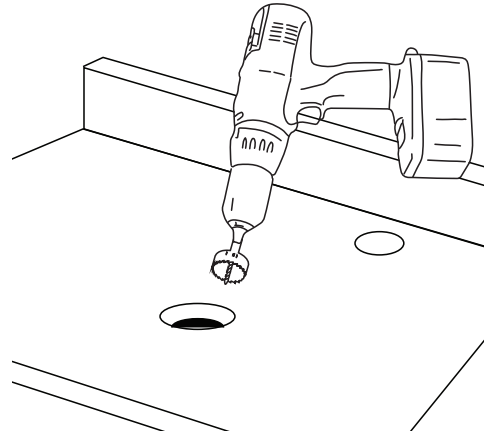

3. Install Faucet

- Install faucet (not included) according to manufacturer's instructions..

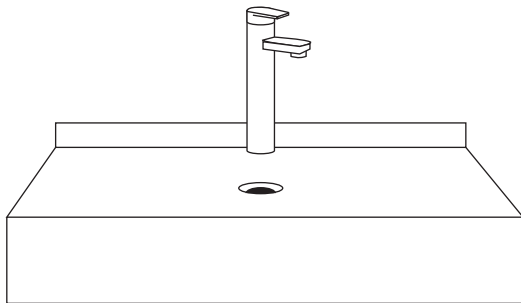

4. Install Basin

- Check alignment of the basin to the opening in the countertop.
- Use a bead of clear silicone (or preferred adhesive) around the underside of the basin.
- Carefully place the basin on the countertop, align, and press firmly.
- Allow sealant to set above 60 minutes.
- Use acetone or denatured alcohol to remove any excess sealant after application.

